 



07EV750

# ELECTROHOME



 Under-the-Counter  
7" LCD TV/DVD Player/Radio

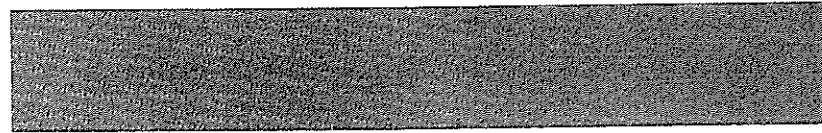
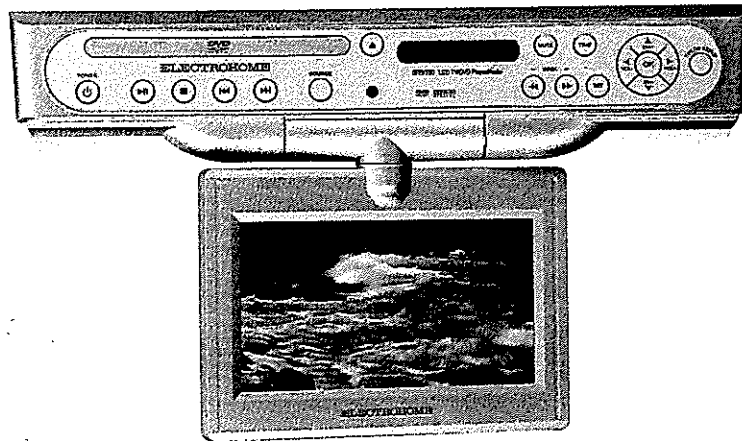
## USER MANUAL



## Table of Contents

Table of Contents .....	1
Important Safety Instruction.....	2
FCC Notice.....	3
Characteristic Features .....	4
Disc Information .....	5
Front Panel .....	6
Rear Panel and Display Panel.....	8
Remote Control .....	9
Preparation .....	9
Using Of Remote Control.....	9
<b>System Connections</b> .....	13
Connecting To External AV Signal Source .....	13
Connecting To TV Signal Input Source.....	13
Connecting To Antenna .....	14
Connecting To the Power Adapter .....	15
<b>Radio Function</b> .....	16
<b>TV Function</b> .....	17
<b>AV Function</b> .....	21
<b>Play Operation</b> .....	22
<b>Playback Functions</b> .....	25
<b>System Setup</b> .....	26
DVD Setup .....	26
LCD Setup .....	28
Installing the Unit in Kitchen.....	29
Troubleshooting .....	31
Specifications .....	32
Warranty .....	33

## Important Safety Instructions

 <b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	 <b>WARNING:</b> To reduce the risk of fire or electric shock, DO NOT expose this product to rain or moisture.
--	--



The lightning flash with arrowhead symbol, within a triangle, alerts the user to "dangerous voltage" which could cause electric shock.



The exclamation point within a triangle is to indicate that the user should read important operating and maintenance instructions in the manual.



**CAUTION:** Laser radiation when open. Do not stare into beam. CAUTION: Use of controls or adjustments or performance of procedures, other than those specified herein may result in hazardous radiation exposure.

### Notes

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Maintain well-ventilated conditions around the product. Do not put the product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) This unit is equipped with a polarized plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the plug provided doesn't fit in your outlet, consult an electrician for replacement of the obsolete outlet. Removal of the polarized plug will diminish the plugs level of safety.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

### IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. DANGER: Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to eyes.
3. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.

**Note:** Do not touch the color TFT LCD screen by hand directly.



## FCC Notice

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## Characteristic Features

This product incorporates a DVD player, LCD display, TV receiver and radio function in one system. It is designed for convenient use in the kitchen. Please refer to page 29 for the installation instructions.

### Multiple Mode

- DVD
- TV
- Radio
- External Audio & Video Input mode

### High Quality Property

#### Video Screen

Supports wide screen (16:9) aspect ratios.

#### AV Input

External Audio, Video input can be connected to most external AV sources.

#### LCD (Liquid Crystal Display) screen

Color video screen designed with LCD technology clearly shows video data.

#### Amplifier Function

Built-in 2x2.5w stereo amplifier with left and right speakers.

#### Switching Power Adapter

Automatically adapts to the voltage required.

#### Special Functions

Supports Multi-language, multi-angle and Parental-lock features.

### Advanced Playing Function

#### Compatibility

Plays: DVD, CD and JPEG discs.

#### On-Screen Display

Displays your choice of English or French.

#### Fast Search Function

Multi-speed, fast forward, fast reverse, slow play and repeat playback.

#### Zoom Function

Allows the viewer to enlarge in the picture.

#### Search By Time

Search for a certain time on a disc.

### TV Functions

- Clear TV signal reception.
- Search for TV channels automatically.
- Automatically memorize the channels.

### Radio Functions




- Clear AM/FM signal reception.
- Search for radio stations automatically.
- Store radio stations easily.
- Search for radio stations in high or low frequency range.

### Region Code

DVD players and discs are coded by region. These regional codes must match. If the codes don't match, the disc cannot be played, this player's code is region 1.

## Disc Information

### Disc Formats Supported By This Player

DISC LOGO	DIAMETER	PLAYBACK TIME/ PLAYABLE SIDES	
	12cm	133 min (SS-SL)	74 min
		242 min (SS-DL)	
		266 min (DS-SL)	
	8cm	484 min (DS-DL)	20 min
		41 min (SS-SL)	
		75 min (SS-DL)	
	12cm	82 min (DS-SL)	74 min
		150 min (DS-DL)	
		8cm	

The disc maker specifies the operation of some DVD discs. Please refer to the instruction manual with the disc.

### Care of Discs

Do not touch the playing surface of the disc.  
Do not stick paper or labels on the disc.

### Cleaning of Discs

If a disc has fingerprints or dust on it, lightly wipe the disc with soft cloth from the center of the disc outward.



 
### Storage of Discs

Do not expose discs to direct sunlight or excessive temperatures.

Never use record cleaning sprays, or any other solvents to clean your discs.

## Front Panel

### Front Panel Drawing

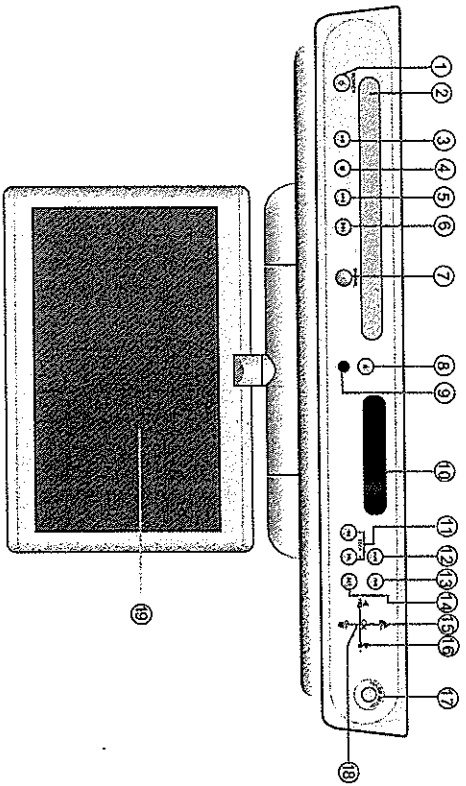

1. **POWER button**  
Press to enter or exit the **STANDBY** mode.
2. **Disc Tray**  
Used to load disc.
3. **▶|| PLAY/PAUSE button**  
Press to start or pause playback under **DVD** mode.
4. **■ STOP button**  
Press to stop playback under **DVD** mode.
5. **M**  
Under **DVD** mode, press once to go to beginning of the current track/chapter. Press twice to go to the previous track/chapter during **DVD** disc playback.
6. **M**  
Press to go to the next track under **DVD** mode.
7. **SOURCE button**  
Press to shift among **DVD**, **TV**, **AV**, **FM** and **AM** mode.
8. **▲EJECT button**  
Press to open or close the disc tray.

- 6 -


## Front Panel

 9. **Remote Sensor**  
Receives remote control signal for operation.
10. **Display panel**  
Displays the time, status, radio frequency and radio station number. When adjusting volume, the **VOL** and volume level will be displayed on the display panel for several seconds.
11. **SEEK +/- button**  
Under radio mode, press once to fine tune frequency backward or forward. Press for about 1.5 seconds to search radio stations backward or forward automatically. Under **DVD** mode, press to activate fast backward or forward playback.
12. **MUTE button**  
Press to turn the speaker output on or off. The corresponding information will be displayed on the display panel.
13. **TIME button**  
Press it once to display the time on the display panel. In standby status, the time is still displayed on the panel. Press it again to set the time on the display panel. Use the **◀ ▶** buttons to select the editing position of hour or minute, and then use the **▲ ▼** buttons to adjust the value of the hour or minute upward and downward.
14. **SET button**  
Press to enter and exit from the timer setup menu. Press to memorize the station under **AM/FM** status.
15. **▲/▼ button**  
Press to select items in the setup menu.  
Press to select channels or radio stations under **TV** or radio mode.  
Press to adjust the value when setting the time on the display panel.
16. **◀/▶ button**  
Press to select items in the setup menu.  
Or press to adjust the volume. Or press to adjust the value in the picture setup menu.
17. **TV/LCD SETUP button**  
Press to enter the LCD setup menu.
18. **OK button**  
Press to confirm selections in setup menu.
19. **LCD screen**  
Presents a high resolution picture.

- 7 -


## Rear Panel and display panel

### Rear Panel Drawing

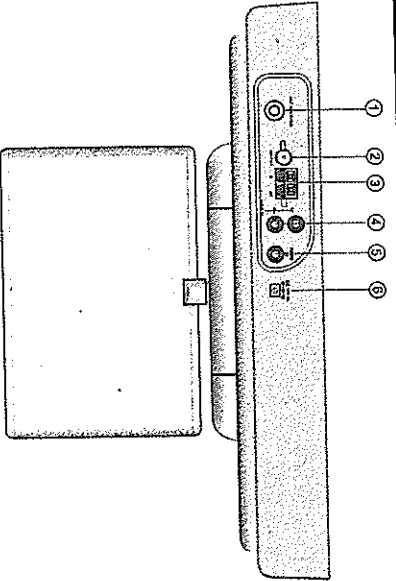

1. **ANT INPUT jack**  
Connected to external antenna to receive the TV program in TV mode.
2. **FM 75Ω coaxial antenna jack**
3. **AM antenna jack**
4. **Left/Right AUDIO input jack**  
Connection for audio input.
5. **VIDEO input jack**  
Connection for video input.
6. **Direct current 12V input jack**

### Display Panel Drawing

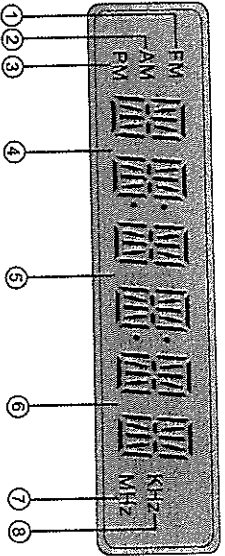 


1. **FM radio status indicator**
2. **AM radio status indicator**
3. **PM time indicator**
4. **Hour or character indicators**
5. **Minute or character indicators**
6. **Character indicators**
7. **FM frequency unit of MHz indicator**
8. **AM frequency unit of KHz indicator**


## Remote Control
 
### Preparation


Refer to the drawing and remove the empty battery receptacle.

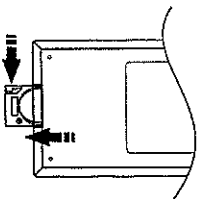

 Insert the battery into the receptacle. Make sure the polarity matches the marks inside the component.

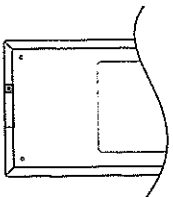


 Insert the receptacle into the remote control.

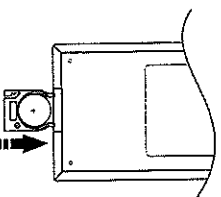

### Using Of Remote Control

 Point the remote control towards the main unit when operating. The r/c works best at a distance less than 7m and at an angle of up to 60° to the front of the unit. No obstacles may stand in the way between r/c and infrared sensor.

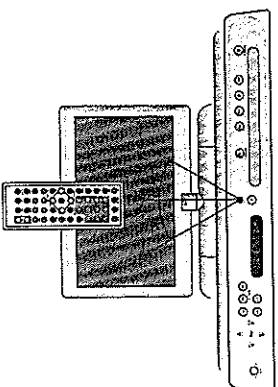


The battery normally last for about six months. This depends on how often and for what operations the remote control is used.

If the remote control unit fails to work even when it is operated near the player, replace the battery. If the r/c is not used for a long period of time, please remove the battery from the compartment, to prevent damage by leakage.

## Remote Control
 
### Remote Control Drawing

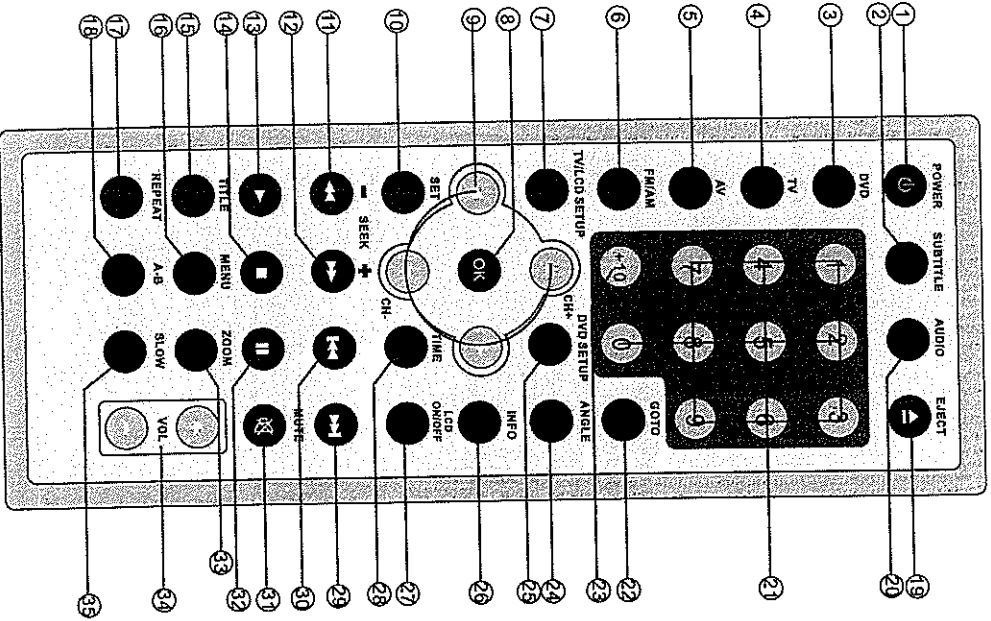

- 10 -

## Remote Control

- 1. POWER button**  
Press to access to or exit the STANDBY mode.
- 2. SUBTITLE button**  
Press to select a subtitle language or to turn subtitles off when a DVD with multi-subtitles is playing.
- 3. DVD button**  
Press to enter DVD mode.
- 4. TV button**  
Press to enter TV mode.
- 5. AV button**  
Press to shift to external AV input mode.
- 6. FM/AM button**  
Press to shift to FM/AM signal input mode.
- 7. TV/LCD SETUP button**  
Press to enter the LCD SETUP menu.
- 8. OK button**  
Press to confirm selections.
- 9.  $\leftarrow \rightarrow \uparrow \downarrow$  buttons**  
Press to select menu items or settings. Press  $\leftarrow \rightarrow$  buttons to adjust value in the picture setup menu. Press  $\uparrow \downarrow$  buttons to select channels or radio stations forward and backward in TV or radio mode. Or press to adjust the value of time when setting time on the display panel.
- 10. SET button**  
Press to enter and exit from the timer setup menu. Or Press to memorize the station under AM/FM status.
- 11. SEEK - button**  
Under radio mode, press once to fine tune frequency backward. Press for about 1.5 seconds to search radio stations backward automatically. Under DVD mode, press to activate fast backward playback.
- 12. SEEK + button**  
Under radio mode, press once to fine tune frequency forward. Press for about 1.5 seconds to search radio stations forward automatically. Under DVD mode, press to activate fast forward playback.
- 13. PLAY button**  
Press to start playback under DVD mode.
- 14. STOP button**  
Press to stop playback under DVD mode.
- 15. TITLE button**  
Press to display titles. If present on the disc under DVD mode.
- 16. MENU button**  
Press to access the disc menu under DVD mode.
- 17. REPEAT button**  
Press to repeat a title, chapter, title or the entire disc.
- 18. A-B Repeat button**  
Used to play a section of the DVD from point "A" to point "B". Press once to select the starting point (A) press again to select the end point (B). Press a third time to stop the A-B Repeat.

- 11 -

## Remote Control

- 19. EJECT button**  
Press to open or close the disc tray.
- 20. AUDIO button**  
Press to access various audio languages, when the DVD disc contains multiple audio languages.
- 21. 0-9 number buttons**  
Select numbers by pressing these buttons.
- 22. GOTO button**  
Press to select the desired disc starting Time, Track or Title.
- 23. +10 button**  
Select track number greater than 9 in DVD mode.
- 24. ANGLE button**  
Press to select different angle during multi-angle disc playback in DVD mode.
- 25. DVD SETUP button**  
Press to access the DVD setup menu under DVD mode.
- 26. INFO button**  
Press to display detailed playback information.  
Press repeatedly to display additional information or to turn the information display OFF.
- 27. LCD ON/OFF button**  
Press to turn the LCD screen display on or off under TV, AV and DVD mode.
- 28. TIME button**  
Press it once to display the time on the display panel. In standby status, the time is still displayed on the display panel. Press it twice to set the time on the display panel. Use the  $\leftarrow$   $\rightarrow$  buttons to select the editing position of hour or minute, use the  $\blacktriangle$   $\blacktriangledown$  buttons to adjust the value of the hour or minute upward and downward.
- 29.  $\blacktriangleleft$  NEXT button**  
Press to go to the next track under DVD mode.
- 30.  $\blacktriangleright$  PREV button**  
Under DVD mode, press to go to beginning of current track or chapter. Press twice repeatedly to go to beginning of a previous track or chapter.
- 31. MUTE button**  
Press to turn on/off the speaker output. The corresponding information will be displayed on the display panel.
- 32. PAUSE button**  
Press to pause playback in DVD mode.
- 33. ZOOM button**  
Press to enter and cycle through zoom functions, use the direction buttons to pan around the screen.
- 34. VOL +/-**  
Press to increase or decrease the speaker volume level.
- 35. SLOW button**  
Press to activate slow forward playback.

 
- 12 -

## System Connections


- ◆ Do not connect the power cord until all other connections have been made.
- ◆ Each time you restart the unit, it remembers the last function used.

### Connecting To External AV Signal Source

Connections should be made as follows:

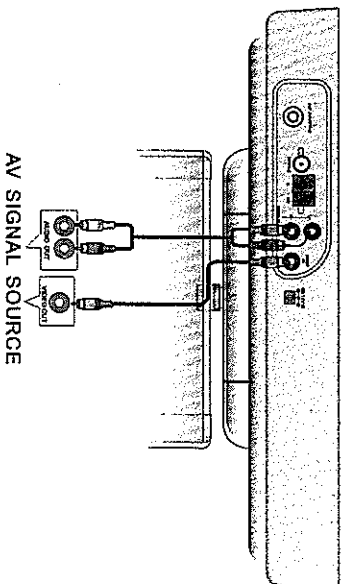

### Connecting To TV Signal Input Source

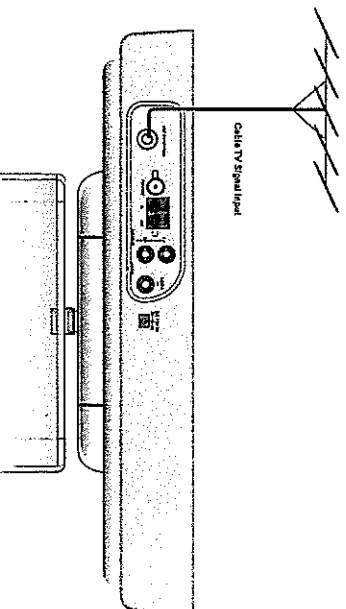 


- 13 -



## System Connections
 
### Connecting To Antenna

Connect the supplied AM/FM antennas to listen to the radio.

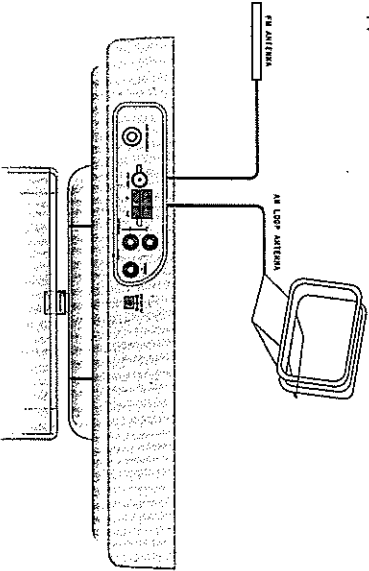

  - ◆ In order to improve the signal, move AM loop antenna away from system and other equipment.
- ◆ Extend FM antenna fully.
- ◆ Keep the FM antenna as horizontal as possible after connection.
- ◆ When connecting the supplied AM loop antenna, connect two black cords to AM and ground jacks as shown below.

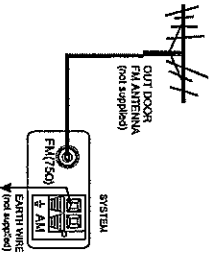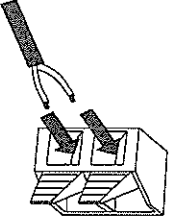


- ◆ If the FM reception is poor, use a 75  $\Omega$  coaxial cable (not supplied) to connect system to an outdoor FM antenna as above.
- ◆ If you connect the system with outdoor FM antenna, you should earth the system in order to avoid lightning strike.
- ◆ Do not connect the earth wire to gas pipe to prevent gas explosion.

## System Connections
 
### Connecting To the Power Adapter

This unit is powered via the switching power adapter (supplied). See the below figure for details:

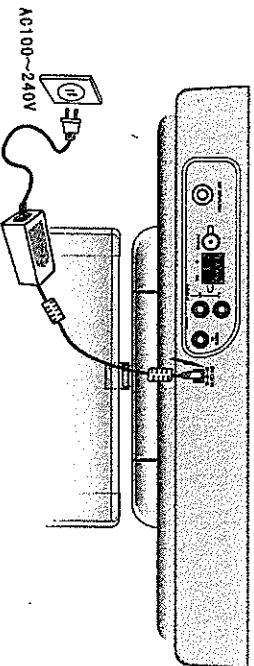

1. Connect the AC adapter to jack marked with "DC 12V IN" on the rear panel of the unit.
2. Plug the two-prong end of the power cord to the grounded electrical socket.
3. When not using the unit, turn off the power of the unit first, and then unplug the power supply to prevent malfunctions.

## Radio Function

### Radio Function Operation

Press the AM or FM button on the remote control or front panel to enter AM or FM radio mode. Then press the SEEK+/- button for about 1.5 seconds on the remote control or front panel to start searching forward/backward from the current frequency. Press the SEEK+/- button again to stop searching. Radio frequency will be displayed on the display panel. The frequency range of FM is from 87.5MHz to 108MHz, frequency range of AM is from 520KHz to 1710KHz.

### Fine Tuning

Press the SEEK+/- button on the remote control or front panel once to fine tune the frequency forward/backward under radio mode.

### Semi-memorizing radio stations

If you like a radio station and want to store it for later listening, press the SET button to memorize it. "SAVE X X" will be displayed on the display panel, "X X" represents the default station number.

There are two methods to organize the memorized stations:

- ◆ Use the ▲ ▼ buttons to adjust the station number for your preference, and then press the SET button again, the station will be memorized with the coded station number.
  - ◆ Press the SET button again, the station will be automatically memorized with the default station number in sequence.
- You can store radio stations from 0 to 19, total 20FM or 20AM radio stations. If no buttons are pressed within 3 seconds of pressing the SET button first time, the frequency will appear on the display panel again, and the station will not be stored.

### Accessing memorized radio stations

- ◆ First use the number buttons on the remote control for input, then press the OK button for confirmation to go to the selected radio station directly. Or without pressing any button and wait a moment, it also goes to the selected radio station.
- ◆ Press the ▲ ▼ buttons on the remote control or front panel to select the radio stations forward and backward.

When selecting the stations, the "CH XX" will appear on the display panel, where the "XX" is the channel number of the stored radio station. After a few seconds, the "CH XX" disappears and the radio frequency will be displayed once again.

## TV Function

### Basic Operation

Connect the antenna to the antenna jack on the rear panel. After connecting the antenna, connect the power supply cord. If the player is in standby mode, press the POWER button on the front panel to turn on the power.

Press the TV button on the remote control to shift to TV mode.

Press the ▲ ▼ buttons on the remote control to select the desired channel. Or first press the number buttons on the remote control for input, then press the OK button for confirmation to go to the selected channel directly, or without pressing any button and wait a moment, it also goes to the selected channel.

Some preferences can be preset:

### Picture Parameter Setup

Press the TV/LCD SETUP button once on the remote control to enter PICTURE setup menu, and screen display as shown:

PICTURE	
BRIGHTNESS	10
CONTRAST	10
COLOR	10
LANGUAGE	ENGLISH
RESET	
◀ EXIT	TV SETUP ▶

Use the ▼, ▲ buttons to select the item you want to set (Brightness, Contrast, Color). Use the ►, ◀ buttons to adjust, you can adjust the items between 0 and 20.

Use the ▼, ▲ buttons to select the Language, press the ►, ◀ buttons to select the language you prefer.

 
To restore a setting to the original value, use the ▼, ▲ buttons to select Reset, then press the OK or ► to confirm the change.

First use the ▼, ▲ buttons to highlight the PICTURE, then press the ◀ button on the remote control to exit the setup menu, and press the ► button on the remote control to enter TV Setup menu.

### TV System Setup

When the ► button is pressed, the TV system setup menu will appear.

## TV Function

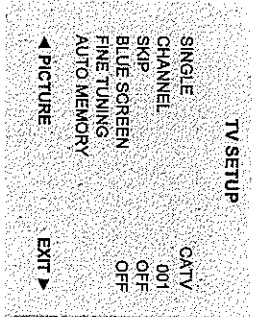

Use the **▼/▲** buttons to select the item you want to set. Use the **▶/◀** buttons to select the item and enter it.

First use the **▼** , **▲** buttons to highlight the **TV SETUP**, then Press the **▶** button on the remote control to exit from the setup menu, and press the **▶** button on the remote control to return to the picture setup menu.

### Signal

Use the **▶** direction button to select CATV TV signal input mode.

Use the **▶** direction button to select ANT TV signal input mode.

### Channel

Use the **▶/◀** buttons to change the channel.

### Skip

When the **▶** button is pressed to turn the function ON, it will skip the current channel when using **▼/▲** to select channels.

When the **▶** button is used to turn the function OFF, it will play the channels in sequence when selecting under normal playback status.

### Blue Screen

This function is only available under no signal input mode.

Use the **▶** button to turn the function ON, use the **▶** button to turn the function OFF.

 
### Fine Tuning

Use the **▼** , **▲** buttons to select Fine Tuning, and then press the **▶** , **▶** buttons to tune forward or backward from the current channel.

## TV Function

### Auto Memory

Use the **▼** , **▲** buttons to select Auto Memory, press the **OK** or **▶** button to enter auto memory mode:

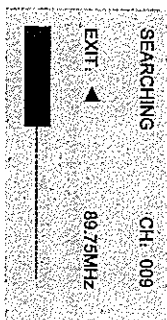

The auto memory will take a few minutes. The unit will search channels from the lowest channel to the highest channel in the standard channel list. When tuning operations are complete the unit will exit and store the channels by sequence in the memory. During tuning, press the **▶** button to exit the auto memory.

Use the **▼** , **▲** direction buttons to select the desired channel from those in memory.

### Timer Setup

Press the **SET** button on the remote control to enter Timer setup menu, the screen will display as below:



Use the **▼** , **▲** buttons to select the item you want to set.

Use the **▶** , **▶** buttons to enter the item and to select.

Press the **SET** button again on the remote control to exit from the setup menu.

### Timer

Use the **▶** , **▶** direction buttons to select ON or OFF. This function allows you to set the start time and end time of the desired signal source. No matter what mode the unit is in, this function will automatically start the playback of the desired signal source. Select ON to activate the function; select OFF to disable the function.

## TV Function

### Power on

To set the playback start time of the signal source, use number buttons to input the desired start time in sequence of hour, minute. Press the **▶**, **◀** direction buttons to shift between am and pm.

### Power off

To set the playback end time of the signal source, use number buttons to input the desired time in sequence of hour, minute. Press the **▶**, **◀** direction buttons to shift between am and pm. When the playback of the signal source is over, the player will enter standby mode.

### Signal

Use the **▶**, **◀** direction buttons to select CATV, ANT, FM or AM.

### Channel

Use number buttons to input the desired TV channels.

### Note:

The function is active as long as the unit is continuously supplied with power. The unit will automatically play the selected input signal at the set start time and enter standby mode at the set end time each day.

 
## AV Function

### AV Function

The player has an additional AV input so it can function as a monitor for a DVD player, video cassette player, satellite receiver, video game, etc. When an AV source is connected, press the AV button on the remote control to enter external input AV mode.

### Picture Parameter Setup

Press the TV/LCD SETUP button once on remote control to enter PICTURE setup menu, and screen will display as shown:

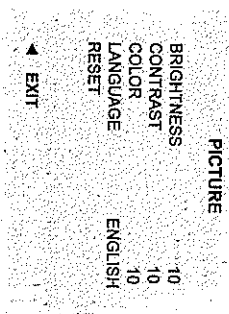

Use the **▼**, **▲** buttons to select the item you want to set (Brightness, Contrast, Color). Use the **▶**, **◀** buttons to adjust the items between 0 and 20.

Use the **▼**, **▲** buttons to select the Language, press the **▶**, **◀** buttons to select the language you prefer.

Select Reset and press the OK or **▶** button to return to the factory default settings.

First use the **▼**, **▲** buttons to highlight PICTURE, then press the **▶** button on the remote control to exit from the setup menu.

### Note:

Under AV mode, if there is no signal, the LCD screen will be blue screen.

## Play Operation

### Preparation

1. Install the unit in the kitchen; refer to page 29 for details.
2. After connecting the unit to the AC power, turn on the unit's power by pressing the POWER button on the front panel or the remote control.
3. Press the DVD button on the remote control or the SOURCE button to shift to DVD mode.
4. Press the EJECT button on the front panel or the remote control to open the disc tray.
5. Load the disc with the label facing up.
6. Press the EJECT button again to close the disc tray. The player will automatically search for the disc and start playback.

### DVD Playback

#### Menu

Normally there is a selecting menu for DVD discs. You can press the MENU button to enter the menu, and use the direction buttons to highlight an item you would like to select. Press the OK button to select it.

#### Title & Chapter

Normally there are several titles in a DVD disc, and several chapters (sections) in a title. You can select any title or chapter quickly by entering the relevant number.

#### Audio

DVD discs can contain up to 8 audio bit streams. For Example: English, Spanish, French etc.

To select the audio bit stream you prefer press the AUDIO button on the remote control during playback. The DVD player will play the next audio bit stream every time you press the AUDIO button in succession.

**Note:** This function is only available for discs that have several audio bit streams recorded onto it.

#### Angle

During DVD disc playback, press the button to select the different video angle for viewing.

**Note:** This function is only available for DVD discs that have several video angles.

## Play Operation

### Subtitle

A DVD disc can be recorded with up to 32 subtitles.

Press the SUBTITLE button on the remote control during playback to select the one you prefer.

**NOTE:** This function is only available on DVD discs that are recorded with multi-subtitles.

### CD Playback

The player will play all tracks on a CD disc by default. You can use the **⏪** and **⏩** (PREV/EXT skip) buttons, or number buttons to select a track.

### JPEG Playback

JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film.

### Normal Playback

Load a JPEG disc in. Use the OK button and **⏪** Left/Right direction button to select a submenu with picture, and then use the **⏪** Up/Down direction button to select the contents.

- **Many discs have other contents besides pictures.**

### Picture Rotation

This can be used only when the picture is normally displayed. Once another picture is selected, rotation will be cancelled automatically.

During playback, use the direction buttons to rotate the picture.

### Zoom and Move

The ZOOM button is used to turn on/off the zoom and move functions.

When this function is turned on, use the **⏪** REV/FWD SCAN button to control zoom proportion and the TV screen will display the relevant proportion.

When this function is turned off, the picture will resume normal size. Press the MENU button to return to menu page.

- **Some JPEG discs may not support rotation or zooming functions.**

## **Playback Functions**

---

### **Stop**

During playback, press the STOP button once on the remote control to stop playback of a disc. Press the PLAY button and the DVD Player will resume playback of the disc from the point where it was stopped.

### **Pause**

Press the PAUSE button once on remote control or front panel to pause playback. Press the PLAY button to resume normal playback.

### **Resume Playback**

Press the STOP button at the point if you wish to stop the playback of a disc. The DVD Player will memorize the location where playback of the disc was stopped. Press the PLAY button to resume normal playback. The DVD Player will resume the playback of the disc from the location where it was stopped. This function will not operate if the disc is removed from the DVD Player. Press the STOP button twice (2). Playback of the disc will stop. When the PLAY button is pressed again, playback of the disc will start from the beginning of disc.

### **Zoom**

Press the ZOOM button on the remote control to cycle through the different zoom settings.

### **Fast Playback**

Press the » or « button on the remote control to activate fast forward or rewind playback.

### **Slow Playback**

Press the SLOW button to activate slow forward playback.  
◆ There is no slow playback for CD discs.

### **Search By Time**

During DVD disc playback, press the GOTO button on the remote control once, there will be a menu displayed on the screen. You can set or select items for your preference. Use the ▲▼ direction buttons to select items, press the OK button to enter and use the ▲▼ direction buttons to select the desired item. Press the ◀ direction button to return. When select the Title or Chapter, use number buttons to input desired title or chapter.  
◆ Some DVD discs do not support the search function.

## **Playback Functions**

---

### **Previous and Next**

Press the PREV ◀ button once to return to the currently playing Chapter or Track. Press the PREV button twice repeatedly and playback will start from the previous Chapter or Track.

Press the NEXT ▶ button on the remote control and playback of the disc will start from the next Chapter or Track.

### **Repeat**

To repeat a Title, Chapter or Track press the REPEAT button on the remote control. Continually pressing the REPEAT button will display a menu as follows: Repeat Chapter, Title, All.

You can temporarily select a section of a DVD that you would like to play repeatedly. You do this by marking the start and the end of the section using the A/B button. During playback press the A-B button on the remote control at the beginning of the segment (point A) you wish to play repeatedly. Press the A-B button again to mark the end of the segment (point B).

The DVD player will automatically return to point A and repeat playback of the selected segment (A-B). To resume normal playback, press the A-B button again.

## System Setup

### DVD Setup

You can customize the set up menu to your own preference. Press the "DVD SETUP" button on the remote control to display the setup menu. The menu will include "General Setup", "Speaker Setup", "Dolby Digital Setup", "Video Setup", and "Preference Setup". Press the direction button (◀ ▶ ▲ ▼) on the remote control to select a category. All the items in the category will appear on the screen. Press the "OK" button to enter the category.

### Category

When you enter a category all the items under this category will appear, the highlighted category is the current set up.

Press the right direction button (▶) on the remote control to select another category (new selection will be highlighted). Press the "OK" button for confirmation.

Press the left direction button (◀) to enter the other setup menu(s).

### General Setup

#### TV Display

Select Normal/PS or Normal/LB when a 4:3 TV is connected.

Select Wide using the 16:9 screen on the unit or when a wide screen TV is connected.

#### OSD Lang

There are three different OSD languages for selection. You can select English or French.

#### Captions

You can choose captions ON or OFF during playback.

#### Screen Saver

When activated, under stop mode, the unit will go into screen saver mode if the same image remains on the screen for several minutes.

## System Setup

### Speaker Setup

#### Downmix

Select "L/TR" in DOWNMIX, the player will output the audio signal in mixed mono. Select "Stereo", then the player will output a stereo signal.

### Dolby Digital Setup

#### Dual Mono

The function is used to select from stereo, left only, right only, and mixed mono.

#### Dynamic

Use this item to adjust linear dynamic compression rate to get different signal compression effects.

### Video Setup

#### Sharpness

Use this setting to adjust the sharpness level

#### Brightness

Use this setting to adjust the brightness level.

#### Contrast

Use this setting to adjust the contrast level.

### Preference Page

#### TV Type

You can select the video type PAL, NTSC or Multi.

#### Audio, Subtitle, Disc Menu

This setting allows you to hear or read the subtitles of a DVD in your choice of English, Spanish and French etc. if the disc contains multiple languages.

#### Parental

DVD discs equipped with the child lock function are rated according to their contents and settings vary from disc to disc. Depending on the disc, you can lock out selected scenes or playback of the disc altogether. Access parental control by pressing the ▲ ▼ (direction buttons) on the remote control and then press the OK button.

## System Setup

### Password

Parental control features are password protected. The original setting is unlocked. This setting allows you to use number buttons to input any password.

**Note:** The Default Password is 1369. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

 
### Default Reset

Use this function to reset all the settings.

**Note:** For preference setting, the unit must be in the stop mode.

### LCD Setup

Under DVD mode, press the TV/LCD SETUP button on the remote control or front panel, there will be a menu displayed on the screen.

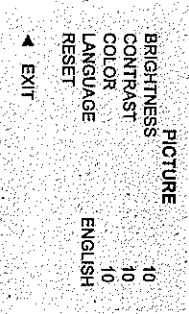

Use the **▼**, **▲** buttons to select the item you want to set (Brightness, Contrast, Color). Use the **▶**, **◀** buttons to adjust, you can adjust the items between 0 and 20.

Use the **▼**, **▲** buttons to select the Language, press the **▶**, **◀** buttons to select the language you prefer.


Select Reset, and press the **OK** or **▶** button to resume the original status.

First use the **▼**, **▲** buttons to highlight the PICTURE, then press the **▶** button on the remote control to exit the setup menu.

## Installing the Unit In Kitchen
 
### Installing the unit under a cabinet


The player unit may be installed in the kitchen with or without the spacer. The suggested mounting position of the unit is under a wall cabinet. See drawings below:

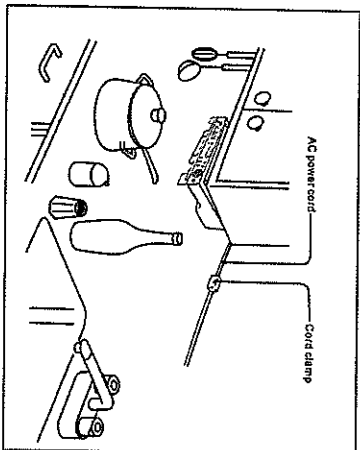

**NOTE:** The dimensions of the player: 355mm x 75mm x 285 mm (W/H/D)  
There should be at least 35mm distance between the unit and the wall.

### Installing steps

 1. Mark the position of the 4 holes by using the supplied template. Drill four 6.5 mm diameter holes. As shown below:

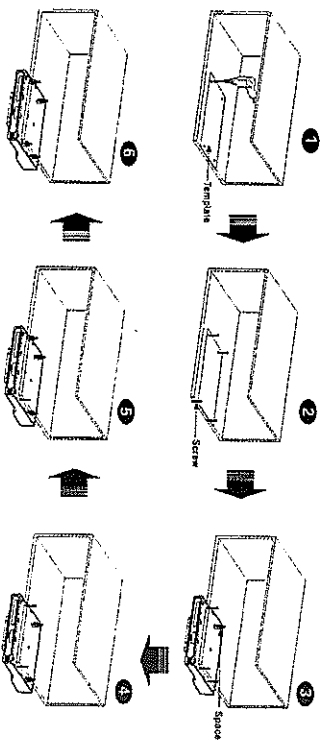

## Installing the Unit in Kitchen

2. If the cabinet door overhangs the shelf and obstructs the unit, adjust the unit or the shelf height for clearance.
3. Install the unit with the supplied mounting screws.
4. There should be at least 35mm distance between the unit and the wall.

### Quick hints

- Since the unit is rather heavy, be careful while doing the fixing work.
- To reduce risk of fire, do not place any heating or cooking appliance beneath the unit, especially while the LCD screen is open on viewing.
- Mount the unit so that its AC power cord can be plugged directly to a wall outlet.
- Do not use a converter or extension cord.
- Be sure that the AC power cord has no slack when the player is working, because the cord acts as an FM wire antenna. If the AC power cord has some slack, wind it up to the cord hook until the cord has no slack.
- The unit has a built-in ferrite bar antenna for AM radio reception. Check the condition of AM reception before fixing in position.
- Install the unit as far as possible from other electrical devices such as: refrigerators, microwave oven, fluorescent lamp, etc.....

## Troubleshooting

SYMPTOM	CHECK ITEM
The player cannot play.	Make sure a disc is loaded. Make sure the disc is loaded with label side up. Disc should be clean, not dirty or warped. Player's region code should be the same as the region code of the DVD disc. Make sure water condensation has not occurred. If it has, remove the disc and keep the player power on until the moisture evaporates.
There is no sound.	Make sure system connection is correct. Make sure the player is not under muting mode. Press the MUTE button to turn on the speaker. Make sure the volume is adjusted to the lowest. Adjust the volume upward. Is your disc dirty or warped? Clean or replace it.
There is no picture or picture is unsteady. Position of the picture is incorrect.	Make sure system connection is correct. Is your disc dirty or warped? Clean or replace it.
Cannot continue to play and plays a section repeatedly.	Make sure the player is not in A-B repeat status. Press A-B button to cancel A-B repeat status. Is your disc dirty or warped? Clean or replace it.
The remote control does not work.	Make sure there are no obstructions between the remote control and the player. Make sure the remote control is pointing at the player. Make sure batteries are inserted correctly (check polarity). Replace weak batteries.

**Other Notes:** Static or other external interfere may cause the player to behave abnormally. If this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.

## Specifications

LCD screen size	7 inches	
Laser Wavelength	Wavelength: 780/650nm	
Video System	PAL/NTSC	
Frequency Response	20Hz~20KHz ±2.5dB	
Audio Signal-to-Noise	≥ 85 dB	
Audio distortion + noise	≤ -70dB (1KHz)	
Channel Separation	≥ 70dB (1KHz)	
Dynamic Range	≥ 80dB (1KHz)	
Radio	System	PLL
	Frequency Range	AM 520~1710KHz FM 87.5~108MHz
Power	AC100V~240V, 50/60Hz	
Power Consumption	≤30W	
Dimension	355mm X 75mm x 285mm (W/H/D)	
Weight	About 3.4 kg	

### DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Manufactured under license from Dolby Laboratories.  
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.  
 Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc.

All rights reserved.

## ELECTROHOME WARRANTY

Consumer Electronics Products

### Thank you for choosing Electrohome!

Jutan International (hereinafter called "Jutan") gives the following express warranty to the original consumer purchaser or gift recipient for this Electrohome brand product, when shipped in its original container and sold or distributed in Canada by Jutan or by an Authorized Electrohome Dealer:

Jutan warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, Jutan shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- Any Electrohome product tampered with, modified, adjusted or repaired by any party other than Jutan or Electrohome's Authorized Service Centres.
- Damage caused or repairs required as a result of the use with items not specified or approved by Jutan, including but not limited to head cleaning tapes and chemical cleaning agents.
- Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables and paper.
- Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- Any product received without appropriate model, serial number and CSA/CUL markings.
- Any products used for rental or commercial purposes.
- Any installation, setup and/or programming charges.

Should this Electrohome product fail to operate during the warranty period, warranty service may be obtained upon delivery of the Electrohome product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized Electrohome Service Centre. In-home warranty service may be provided at Jutan's discretion on any Electrohome television with the screen size of 27" or larger. This warranty constitutes the entire express warranty granted by Jutan and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of Jutan. To the extent the law permits, Jutan disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this Electrohome product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction

of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of Jutan to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

**WARRANTY PERIODS: Parts & Labour (exceptions noted)**

- > Audio Products: 1 Year (Remote Control, if applicable - 90 Days)
- > DVD Products: 1 Year (Remote Control - 90 Days)
- > LCD & Plasma Display TV: 1 Year (Remote Control - 90 Days)
- > Microwave Oven: 1 Year
- > Television Products: 1 Year (Remote Control - 90 Days)
- > VCR Products: 1 Year (Remote Control - 90 Days, Video Heads - 6 Months)

To obtain the name and address of the nearest Authorized Electrohome Service

Centre or Dealer, please contact:

Jutan International, 455 Gordon Baker Road, Toronto, Ontario M2H 4H2 or visit our web site: [www.jutan.ca](http://www.jutan.ca)

For more information on this Warranty or Service Locations, please call (416) 499-5611 or toll free 1-800-663-5954, Monday to Friday 9:00am - 5:00pm Eastern Standard Time.

EH 02/22/2005